



UNI 30 D



INSTRUCTIONS FOR USE AND MAINTENANCE
COMPREHENSIVE CATALOGUE & SPARE PARTS

CT. 200.359

Serial number

**INDEX****USE AND MAINTENANCE**

1 - Use and maintenance	5
1.1 - Introduction	5
1.2 - General information	5
2 - Symbol key	6
3 - Caution and other hazards	7
3.1 - Caution and other hazards	7
4 - Description of the machine	8
4.1 - Type of the machine	8
Manufacturer's registration plate	8
Manufacturer's registration plate location	8
Machine's serial number location	8
4.2 - Description of the machine	9
4.3 - Size of the machine	10
4.4 - Technical data	10
5 - Transport	11
5.1 - Hoisting	11
6 - Use of the machine	12
6.1 - Operating principles	12
6.2 - Pumpable materials	13
6.3 - Preliminary operations	14
Positioning of the machine	14
Hoses	14
Anchoring the hoses	14
Couplings	15
Connections	15
6.4 - Starting the machine	16
Preliminary controls	16
Starting up	18
6.5 - Washing and stopping the machine	20
Stopping the machine	20
Cleaning	20
7 - Maintenance of the machine	22
7.1 - To be performed by the operator	22
Operations to be performed daily	22
At start	22
At the end of the working day	23
Every week	23
Machine not at work for long time	24
7.2 - Change of wear and tear parts by qualified personnel	25
Change of the worn ball valves	25
Replace the gaskets of the inspection plugs	25
Changing the damaged valve's seats	26
Change of the worn piston	26
Change of the teathed wheel and the rubber ring of the centrifugal joint	27
7.3 - To be performed by qualified personnel	27
Operations to be performed every year or 100 h	27
Operations to be performed every 200 h	27
Operations to be performed every 6 m or 500 h	27
8 - Trouble shooting	28
8.1 - Mortar does not come out of the gun	28
Blockage of the spraygun.	28
Blockage of the mortar hoses.	28
Blockage of the valve's group.	29
8.2 - Other inconvenients	29
Loose belt	29
8.3 - Works to be performed by the operator	30
8.4 - Works to be performed by the qualified personnel	33
9 - Responsibility of the operator	34

SPARE PARTS

Tav. 1-Chassis	36
Tav. 2-Pump group	38
Tav. 3-Gearbox group	42
Tav. 4-Agitator	44
Tav. 5--Air system	46
Tav. 6-Engine	48
Tav. 7-Compressor	52
Tav. 8-Mixer	54
Tav. 9-Towbar - axle	58
Tav. 10-Tool box cod. 201.145	60
Tav. 10-Tool box cod. 201.145	62
Tav. 11-Hoses	64



www.dalmex.net

www.dalmex.net

www.dalmex.net

www.dalmex.net

1 - GENERAL INFORMATIONS

1.1 - INTRODUCTION

The UNI 30 mortar conveyor and sprayer machine can be supplied with a variety of accessories. As a result, some of the components and spare parts described in this booklet may not be included with your own equipment.

We have taken special care to clearly illustrate the different variations in order to make it easier for you to distinguish the use and maintenance instructions applicable to your own machine.

Please read these instructions prior to starting up your equipment and follow the instructions carefully.

For any other information you might require, TURBOSOL PRODUZIONE S.P.A.'s customer service is at your complete disposal.

TURBOSOL PRODUZIONE S.P.A.
Via Volta, 1
31030 Pero di Breda di Piave (TV) - ITALIA

Tel. 0039 - 0422 - 90.2.51
Fax 0039 - 0422 - 90.44.08
<http://www.turbosol.it>
e-mail: info@turbosol.it

1.2 - GENERAL INFORMATION

TURBOSOL Machinery

This machinery is the product of our lengthy experience and continuous development. The know-how thus acquired, together with our stringent requirements for high quality, constitutes the basic guarantee for manufacturing low-wearing machinery which offers total reliability at low servicing costs.

Precautions to be taken when the machine is operating
Maintenance or repair works must be carried out only when the machine is turned off. Whatever safety devices have been removed in order to complete such work, they must be mounted again after maintenance has been carried out.

Care and maintenance

Care and maintenance are vitally important in making it possible for the machinery to operate as expected. It is therefore essential that all maintenance will be performed on schedule and will be carried out with extreme care.



Safety

This symbol marks each reference to safety in this booklet, and it must be scrupulously observed. The personnel in charge must be fully informed about any safety regulations. Safety and accident-prevention regulations currently in effect in your area or country must likewise be observed.



Training

This symbol indicates that the personnel operating this machinery must have received special training in regard to the correct manner in which such operation must take place.

TURBOSOL SERVICE

For any problem related to trouble with this machinery or when you need spare parts, contact your local Turbosol dealer.

2 - SYMBOL KEY

OBLIGATION



It is compulsory to read this maintenance booklet prior to operating the machine



It is compulsory to read this maintenance booklet with regard to regular and general maintenance



Lifting point



It is compulsory to grease the indicated point

PROHIBITION



Warning:
machinery in operation

